



**CS**

## **Loose Component Feeder CS**

The horizontal feeder CS is used for carrying loose components to the toothed driving wheels of Superform.

It is strongly recommended to use the feeder only on motorized machines.

**7915.180**

**7915.181**

**7915.182**

**7915.184**

Feeder CS10 for SUPERFORM/A-AP-S

Feeder CS20 for SUPERFORM/VP

Feeder CS30 for SUPERFORM/V

Feeder CS40 for SUPERFORM/AF